

## **LW100 Leaf Wetness/Rain Sensor**



## **Description**

The LW100, leaf wetness sensor, is used to monitor rainfall, as well as to measure leaf moisture.

Hang the sensor from the cable at the location where leaf wetness needs to be monitored. The sensor can hang right in the plant. Set the angle of the sensor to approximately the same angle as that of the leaves that are being monitored.

## **Specifications**

Power Requirements: 12VDC @1.0 mA Output: 0-5 VDC Size: 3" x 5.5" Shipping Weight: 2 lbs

**Instrument Connections** 

Black = Ground Red = +12VDC

Brown = Signal Out 0-5 VDC

## **Options and Accessories**

LW100 Leaf Wetness/Rain Sensor

Contact
Global Water
for all your
instrumentation
needs:
Water Level
Water Flow
Water Samplers
Water Quality
Weather

**Remote Monitoring** 

Control





Regional Distributor

803, Riqqa Palace Building
Al-Maktum Ave. opposite Deira Etisalat
P.O.Box 181802 Dubai, UAE
Tel: +9714 - 2270081
Fax: +9714 - 2239962

E-mail: rcsco@eim.ae www.rcs-co.com

